


Joining set B52


WIBE

Pre-assembled joining fitting that saves time (Fittings B1, B2, Bolt and Nut B13).
Used for joining of the side sections of all wire trays.

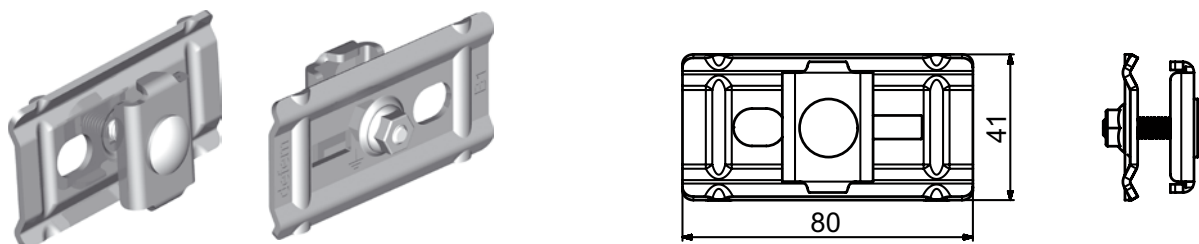


	Electro-galv. Part No	Weight kg	Hot dip galv. Part No	Weight kg	Stainl. steel AISI316L Part No	Weight kg
Joining set B52	11 491 53	0,09	11 492 53	0,10	11 493 53	0,09

Use and installation

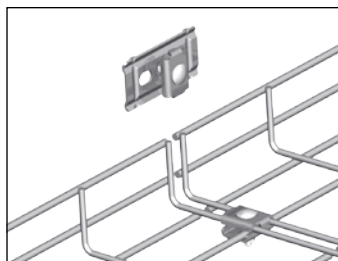

Mount Joining set B52 on the side section.

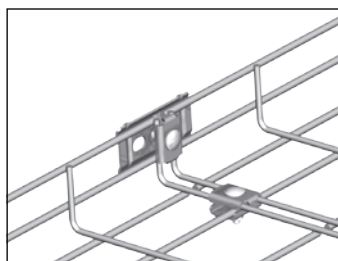


Tighten the bolt and the joining is finished.

Note! For joining of 320 mm trays and wider, extra Fittings B2 need to be mounted with Bolt and Nut B13 in the bottom of the trays.

Bolt and Nut B13

M6x25. Tensi-Lock and Flange Nut M6.



	Number/ package	Electro-galv. Part. No	Weight kg	Hot dip galv. Part. No	Weight kg	Stainl. steel AISI316L Part. No	Weight kg
Bolt and Nut B13/50+50	50 st	11 491 84	0,56	11 492 84	0,57	11 493 84	0,59
Bolt and Nut B13/250+250	250 st	11 491 85	2,82	11 492 85	2,80	11 493 85	2,90